Holme

Mini Oven With Hobs

User manual
Model number: G2SMO3001

Please read these instructions carefully and keep them for future reference

For Customer Services & Spare Parts please call **0845 209 7461**
Opening times: Monday - Friday 9am – 5pm & Saturday 9am – 1pm or visit us at **www.productcareuk.com**

Contents

	Page
Safety instructions.....	2
Before using your Oven.....	7
Cable extensions.....	8
Feature diagram.....	9
Control Panel.....	10
Using your oven.....	11
Using your hotplates.....	12
Cooking Guide.....	13
Cleaning and care.....	14
Connection to mains supply.....	15
Technical specification.....	17
Guarantee.....	18

Safety instructions

HOUSEHOLD USE ONLY

IMPORTANT SAFEGUARDS

When using electric appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.

2. Do not touch hot surfaces.

3. Always use the accessory handle or wear protective, insulated oven mitts when inserting or removing items from the hot oven.

4. Close supervision is necessary when any appliance is used near children. Children should not use this appliance.

5. Do not let the mains cord hang over the edge of table or counter, or touch hot surfaces.

6. To protect against electric shock, do not immerse the cord, plug, or any parts of the oven in water or other liquids.

Safety instructions

7. Do not operate appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.

8. Do not pull the cord in an aggressive manner or lay any heavy objects on it.

9. Unplug from outlet when not in use to minimise any fire hazard.

10. Using accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.

11. Put the electric oven in a dry place. This electric oven is for household use only.

12. When operating the oven, keep at least 10cm of space on all sides of the oven to allow for adequate air circulation.

13. Do not place on or near a hot gas or electric burner.

14. Oversized foods or metal utensils must not be inserted in the oven as they may create a fire or risk of electric shock.

Safety instructions

15. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.

16. Be sure to unplug the electric oven and allow to cool before moving or allowing a competent service person to repair it.

17. Use extreme caution when removing the tray or disposing of hot fat or other hot liquids.

18. Take care not to let the electric oven be scratched by hard edges.

19. Do not cover the air inlet of oven. Do not cover any part of the oven with metal foil. This may cause overheating of the oven which may result in fire.

20. Do not load anything on door glass.

21. Do not put food trays or any other objects directly on the heating elements.

22. Do not use the oven outdoor to prepare food on.

Safety instructions

23. Any repair to the oven should be carried out by qualified or professional persons.

24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

25. Children should be supervised to ensure that they do not play with the appliance.

26. The temperature of all surfaces may be high when the appliance is operating.

27. The surfaces are liable to get hot during use.

28. Outer surfaces are liable to get hot during use.

29. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

30. For appliance with type Y attachment, if the supply cord is damaged, it must be replaced by the manufacturer, its services agent or similarly qualified persons in order to avoid a hazard.

Safety instructions

31. Rear surface of the appliances should be placed against a solid wall.

32. Do not remove parts from the oven such as the feet, screws and so on.

33. Always test the temperature of cooked food, never eat or drink food or liquid straight from the oven , allow it to stand for a few minutes and allow to cool.

34. WARNING: This appliance includes a heating function. Surfaces, other than the functional surfaces may develop high temperatures. Since temperatures are perceived differently by different people, this device should be used with CAUTION. Hold the appliance exclusively to grip surfaces intended to be held and take precautions by using oven gloves. Areas which are not intended to be handle must be given sufficient time to cool.

35. WARNING: it is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection from electric shock.

To reduce the risk of fire in the oven:
Do not over cook food.
Do not leave the oven unattended during use.

Before using your Oven

Before using your electrical oven for the first time, be sure to：

1. Read all instructions included in this manual.

2. Remove sticker from the oven.

3. Confirm the accessories in the carton and remove all racks and pans to wash in hot soapy water or in a dishwasher.

4. Select a level surface that provides enough space for the outlet vents.

5. A minimum clearance of 10cm is required between the oven and any adjacent walls. One side must be open. Leave a minimum clearance of 30cm above the oven.

6. Plug the oven into a suitable 13 amp mains socket, make sure the voltage is the same as on the rating label.

7. After re-assembling your oven, we recommend that you run it at MAX temperature for approximately 15 minutes to eliminate any packing oil that may remain after shipping.

Cable extensions

This unit has a short power supply cord to reduce the risk resulting from becoming entangled in or tripping over a long cord. An extension cord may be used if you are careful in its use:

1.The electric rating of the extension cord should be at least as great as the electrical rating of the appliance.

2. An extension cord with the power cord must be arranged so that it will not drape over the countertop or table top where they can be pulled on by children or tripped over accidentally.

Feature Diagram

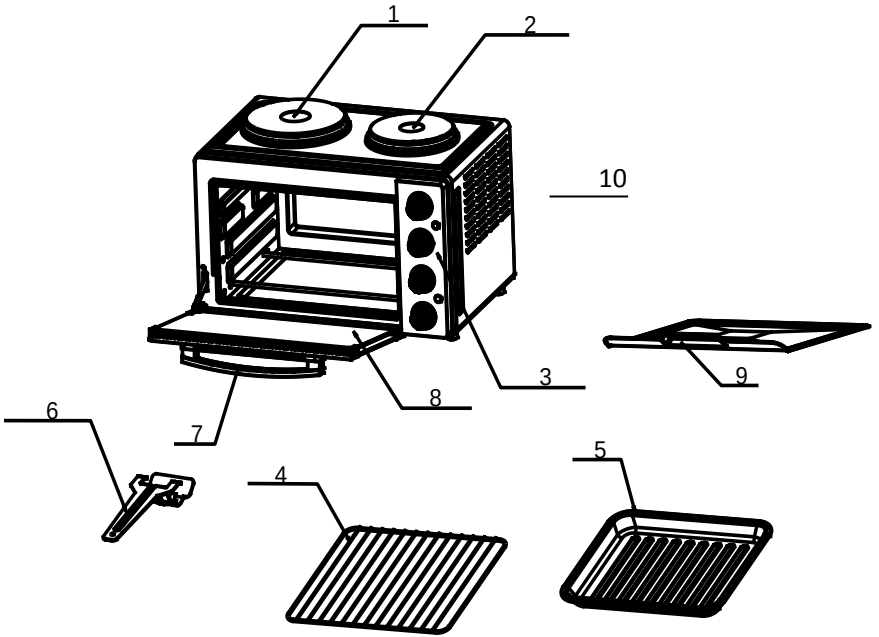

1. Large Hotplate
2. Small Hotplate
3. Control Panel:
4. Grill Rack
5. Baking Tray
6. Handle
7. Door handle
8. Door glass
9. Crumb Tray:
10. Ventilation slots

Warning – do not touch hot surfaces. Keep ventilation slots clear

Control Panel

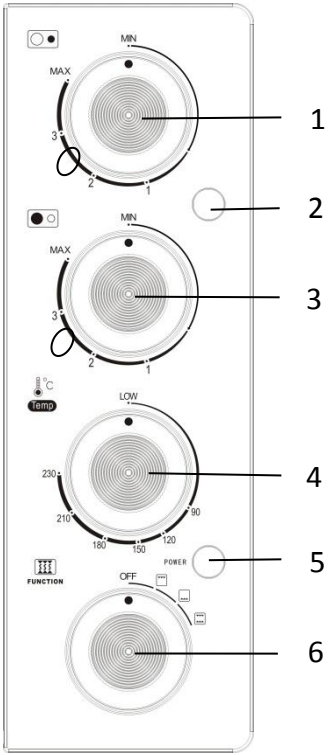

1. Small hotplate temperature control

2. Hotplate power on indicator
   - lights up when either hotplate is switched on

3. Large hotplate temperature control

4. Oven temperature control

5. Power indicator
   - lights up when the mains plug is inserted into the mains socket

6. Oven function selector
   - Top heating section
   - Bottom heating section
   - Top + bottom heating sections

Using the Oven

Note: the oven and the hotplate can all work at the same time.

Insert the mains plug into a suitable 13Amp mains socket.

Choose your required cooking mode with the function selector control (6).

Place the food on grill rack (4) or baking tray (5) and close the oven door.

Do not use paper or plastic containers.
Use the baking tray for any food that is small in size or likely to drip while cooking.
Place the food evenly on the grill rack.

Set the desired temperature.

When you have finished cooking, ensure that you:
Turn the function selector control to the '**OFF'** position and the temperature control (for oven) to **"LOW"** position.

Use accessory handle or oven mitts to remove hot food to avoid any scald.

Always remove the mains plug from the wall socket after cooking.

Using the Hotplates

Insert the mains plug into a suitable 13Amp mains socket.

Choose the size of hot plate that suits the pan you are using and the speed at which you wish to cook the food.

Select the desired temperature for both the larger hotplate and the smaller hotplate as required.

The hotplate function light should switch on.

When completed, turn temperature knob to **"MIN"**.

Always remove the mains plug from the wall socket after cooking.

Note: The weight of the food which is put on the food tray/grill rack must not be in excess of 3kg.

The food should not be placed on one side, we recommend that you distribute evenly.

Cooking Guide

Oven cooking guide：

1. There is no timer function in this oven, you must control the cooking time yourself.
2. Cooking time may vary depending on food ingredients, temperature, mass and portion.
3. If cooking time is prolonged, cooking time may be less with the hot heating elements.
4. The electric oven will adjust the heating elements temperature automatically to avoid overheating

Using the hotplate

The hotplate could be used to cook various casserole dishes.
Cooking Utensils

1. The ideal size pan to us with the hotplate is 145 --180mm in diameter which will allow you to achieve optimum cooking performance. Pans should have a flat bottom and a lid.
2. All utensils should be made from ferrite element such as enamel, cast or stainless steel, aluminum or copper pan is prohibited which will melt when at high temperature.

Cleaning and care

➢ Before you clean the oven, turn it off and unplug it.

➢ Allow the oven and hobs to cool down fully before cleaning.

➢ Keep the inside of the oven clean. Your oven features a quick-clean coating. When food or liquids stick to the oven walls, wipe with a damp cloth. We recommend that you do not use harsh detergent or abrasives.

➢ You should clean the outside of the oven with a damp cloth. Don't allow water to seep into the ventilation openings.

➢ Do not allow the control panel to become wet. Clean with a soft, damp cloth. Do not use detergents, abrasives or spray-on cleaners on the control panel.

➢ Wash all accessories in hot soapy water or in a dishwasher. Wipe the door clean with a damp sponge and wipe dry with a paper or cloth towel.

Connection to the mains supply

WARNING- THIS APPLIANCE MUST BE EARTHED

This appliance is designed to operate from a mains supply of AC230V ~ 50HZ. Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a 13A plug complying with BS1363.

If this plug is unsuitable or needs to be replaced, please note the following:

Important: The wires in the mains lead are
Coloured in accordance with the following code:
GREEN/YELLOW-EARTH
BLUE-NEUTRAL
BROWN-LIVE

Connection to the mains supply

For UK use only – Plug fitting details (where applicable):

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which is marked with the letter E or by the earth symbol or coloured GREEN or GREEN/YELLOW.

The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK.

The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

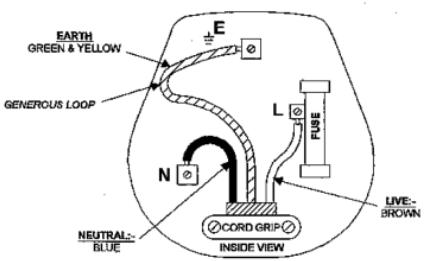

Always ensure that the plug cord grip is fastened correctly.

If a 13A (BS1363) fused plug is used it must be fitted with a 13amp fuse conforming to BS1362 and be BSI or ASTA approved.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead you will find that it incorporates a fuse, the value of which is indicated either on the base of the plug or on the fuse carrier. Should the fuse need replacing, you must use an ASTA approved fuse (conforming to BS1362) of the same rating.

If the fuse cover is lost the plug must not be used until a replacement is obtained from an electrical supplier.

If you need to remove the plug, cut it from the mains lead and dispose of it. Never attempt to re-use this plug or insert it into a socket outlet, as there is a very great risk of an electric shock.

Specifications

Power supply: 220-240V~ 50/60Hz
Total Power: 2900W
Hotplate (Φ180) Output: 1000W
Hotplate (Φ145) Output: 800W
Oven Output: 1100W
Electric Oven Capacity: 28Litres

Guarantee

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which has been supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

For Customer Services & Spare Parts please call
0845 209 7461
Opening times: Monday - Friday 9am – 5pm & Saturday 9am –1pm
or visit us at
www.productcareuk.com

Revision 1

CE

This symbol is known as the 'Crossed-out wheelie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.